

The backdraft damper prevents hot air from travelling into the single wall ducting unless the central heat blower is operating.

❖ **WARNING: DO NOT INSTALL A BACKDRAFT DAMPER WITHOUT CONNECTING IT TO APPROPRIATE CENTRAL HEAT DUCTWORK.**

❖ **WARNING: THIS OPTION CAN ONLY BE INSTALLED ON THE LEFT SIDE OF THE FIREPLACE.**

INSTALLATION

1. On the top of the fireplace, remove the outer cover to the left of the flue outlet. Cut the insulation to the size of the opening, remove it and then remove the cover plate underneath.
2. See Figure 1 to identify which tabs to bend for your fireplace.
3. Install the backdraft damper by inserting it into the opening with the crimped end facing up. Push down the backdraft damper all the way to the bent tabs.
4. Screw each tab securely to the top of the fireplace.

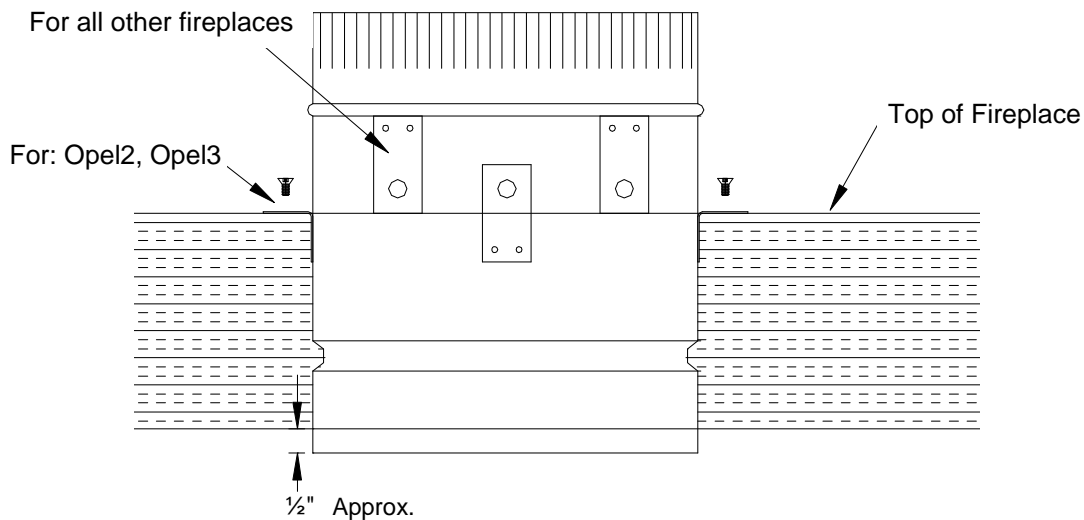


Figure 1 Installation of the backdraft damper

Check List:

- 1 Backdraft Damper (979015)
- Instructions and check list



INITIALS