



FDDHE Topaz Decorative Hearth Extension Installation Instruction


- 1) With an "X-ACTO" knife and a metal ruler, cut out the template.
IMPORTANT : do not use scissors.
- 2) Position the template on the lap at the base left corner of the fireplaces then make a drilling mark. Repeat this operation for the right side. Make sure the distance between the marks is $25 \frac{3}{4}$ ".



- 3) After making sure the distance is $25 \frac{3}{4}$ ", drill two holes with a $\frac{5}{16}$ " diameter bit.
- 4) Place the Decorative Hearth Extension, steel facing up, insert both screws into the previously made holes and tighten them using the supply nuts and washers.




Gabarit de perçage/
Template

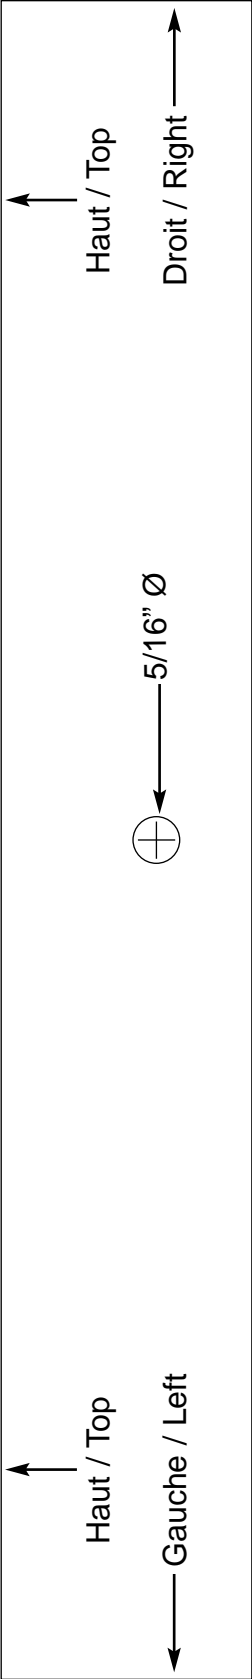

Decorative hearth extension (FDDHE) **TOPAZ**

Check List

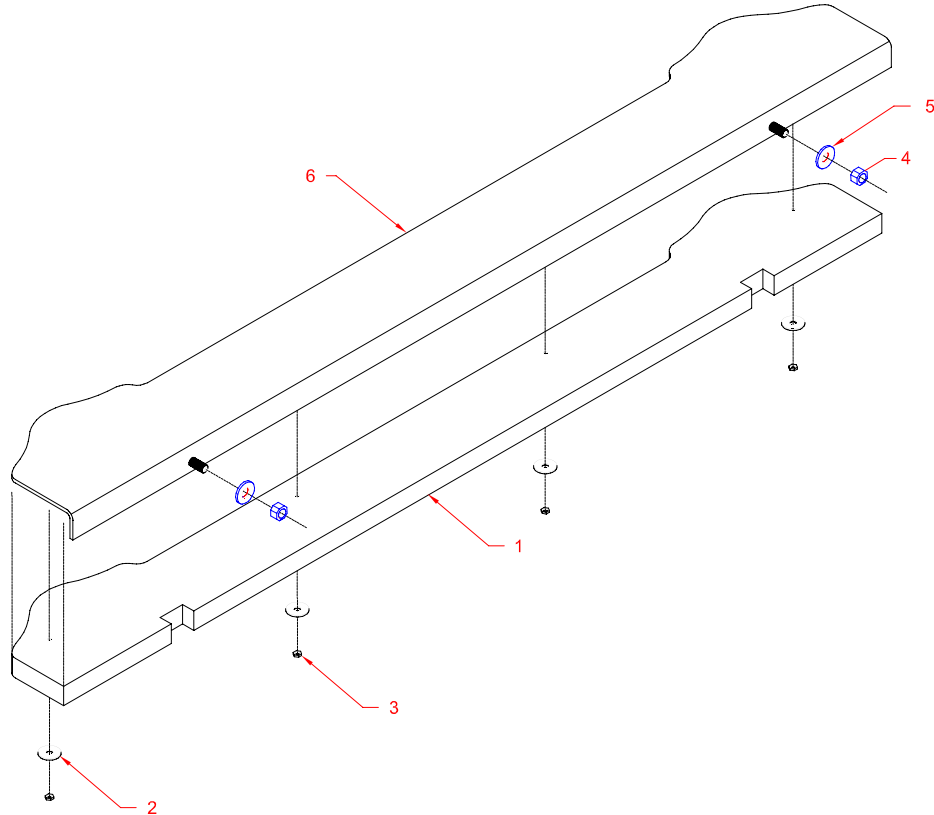

In box (14.15.33):

Wrapped in brown paper

- 7: (1x) Installation instructions (FD-FHE-inst)
- 6: (1x) Decorative hearth extension shelf assembly (1.13.DHE.1.T)
- 5: (2x) Washer 1/4" (904002)
- 4: (2x) Nut 1/4 - 20 (906005)
- 3: (4x) Nut CD 8-32 hex (906004)
- 2: (4x) Washer 13/64" I.D. x 3/4" O.D. (904014)
- 1: (1x) Decorative hearth extension wood insert (979014)

Initials